


刷 BIOS 教程

- 1 U 盘 （格式化 FAT32 格式）
- 2 解压 BIOS 文件后，直接把 EFI 文件夹放在 U 盘根目录下

名称	修改日期	类型	大小
EFI	2022/9/8 22:50	文件夹	
UEFI刷BIOS教程.pdf	2022/9/8 22:53	WPS PDF 文档	1

- 3 开机按 F11 快速启动/选择带 UEFI 开头的 U 盘选项--回车

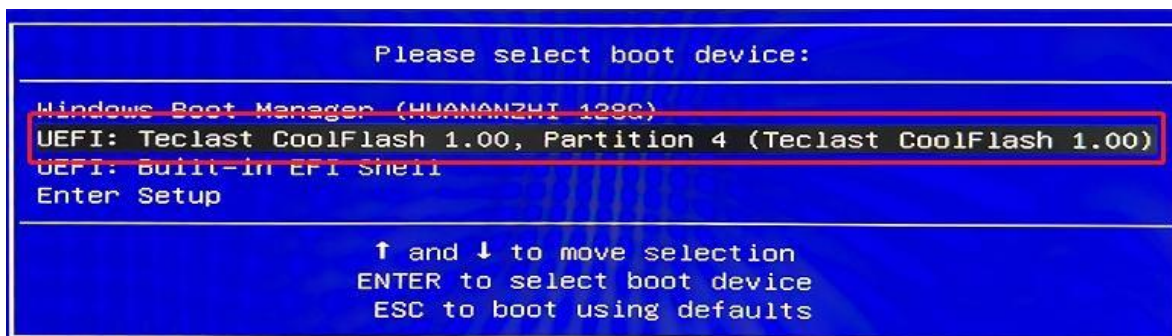

- 4 自动进入 SHELL 模式 . 自动刷新到完成!

```
Processing Flash memory block 548 from 4095.
- Erasing Flash Block [0x225000] - 100 percent complete.
- Programming Flash [0x0225000] 24KB of 24KB - 100 percent complete.
Processing Flash memory block 1043 from 4095.
- Erasing Flash Block [0x414000] - 100 percent complete.
- Programming Flash [0x0414000] 80KB of 80KB - 100 percent complete.
Processing Flash memory block 1071 from 4095.
- Erasing Flash Block [0x430000] - 100 percent complete.
- Programming Flash [0x0430000] 4KB of 4KB - 100 percent complete.
Processing Flash memory block 1136 from 4095.
- Erasing Flash Block [0x471000] - 100 percent complete.
- Programming Flash [0x0471000] 4KB of 4KB - 100 percent complete.
Processing Flash memory block 1934 from 4095.
- Erasing Flash Block [0x78F000] - 100 percent complete.
- Programming Flash [0x078F000] 784KB of 784KB - 100 percent complete.
- Processed memory blocks 4095 from 4095.
RESULT: The data is identical.16384KB of 16384KB - 100 percent complete.

Flash device was programmed. It is recommended to perform
G3 power cycle to complete the flashing process.

FPT Operation Successful.

fs1:\EFI\BOOT> _
```

- 5 刷 BIOS 完成后、重启按 DEL 键进 BIOS 按 F9（载入优化设置）回车、按 F10（保存并退出）回车重新启动即可!

警示：刷 BIOS 过程不能发生人为/意外断电、否则会导致 BIOS 损坏无法开机！！